


Plan:

Plan the installation well so as to be able to spread the loose ribbon correctly taking the measurements of the area (4 panels = 1m²).




Test & Record: (1st Time)

Test the ribbon Resistance & Insulation before to install. Record information from test and label on wire to label logbook putting the tag you can find in the box.

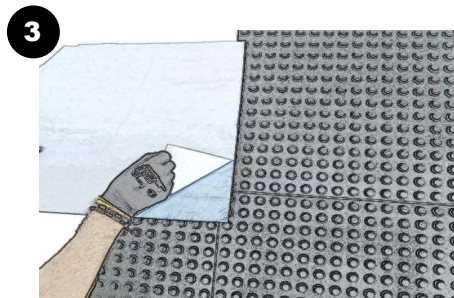

Place the insulation:

Remove the double-sided adhesive from the insulation, place a square next to each other without leaving any free space between them.

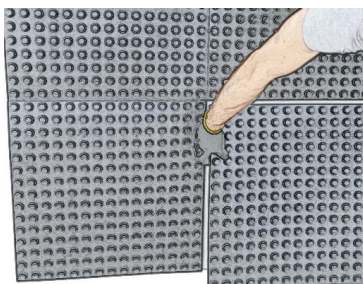

Place double-side adhesive:

Unroll the RETAKK double-sided tape positioning it every 2 spaces.




Remove the silicone paper once the double-sided adhesive tape is correctly positioned



Place loose ribbon GP:

Unroll the loose ribbon progressively and spread it in the insulation inserting it between one rise and the other.

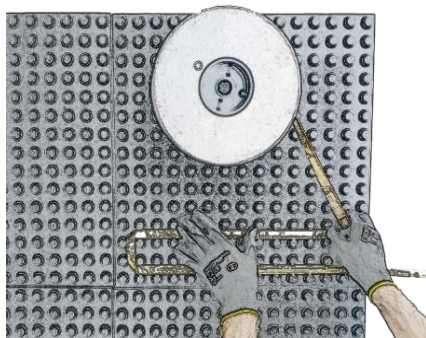

Continue to lay, always leaving a space free for every two, until the end of the ribbon. On folds, place the tape supplied in the kit.

Cover the ribbon:

Be sure to fully embed the ribbon into the thinset or self-leveling compound without damages.

MUST NOT PUT SPLICE AND FACTORY TAIL CONNECTIONS

Test & Record: (2nd Time)

Test the mat resistance & insulation.
Mail in warranty card and label logbook to info@warmset.com.

Cover with the chosen floor

Switching system:
Switch on the mats after a qualified licensed electrician made electrical connections, making sure to follow instructions and installation times of slab/flooring.